



Montážne kovanie:


 kolík Ø10/40 - 28ks	 samorezka 4x20 - 44ks	 samorezka 4x50 - 2ks	 šmykové kovanie 5 stup.- 8 párov	 šmykové kovanie - 1 pár	 zapustná skrutka M6x40 - 8ks	 sektorová podlož. - 14ks
 sektorová skrutka - 10ks	 zapustná skrutka M6x70 - 4ks	 okenná podložka - 4ks	 sektorový kľúč - 1ks	 aretačná noha - 2ks	 filcová podložka - 20ks	

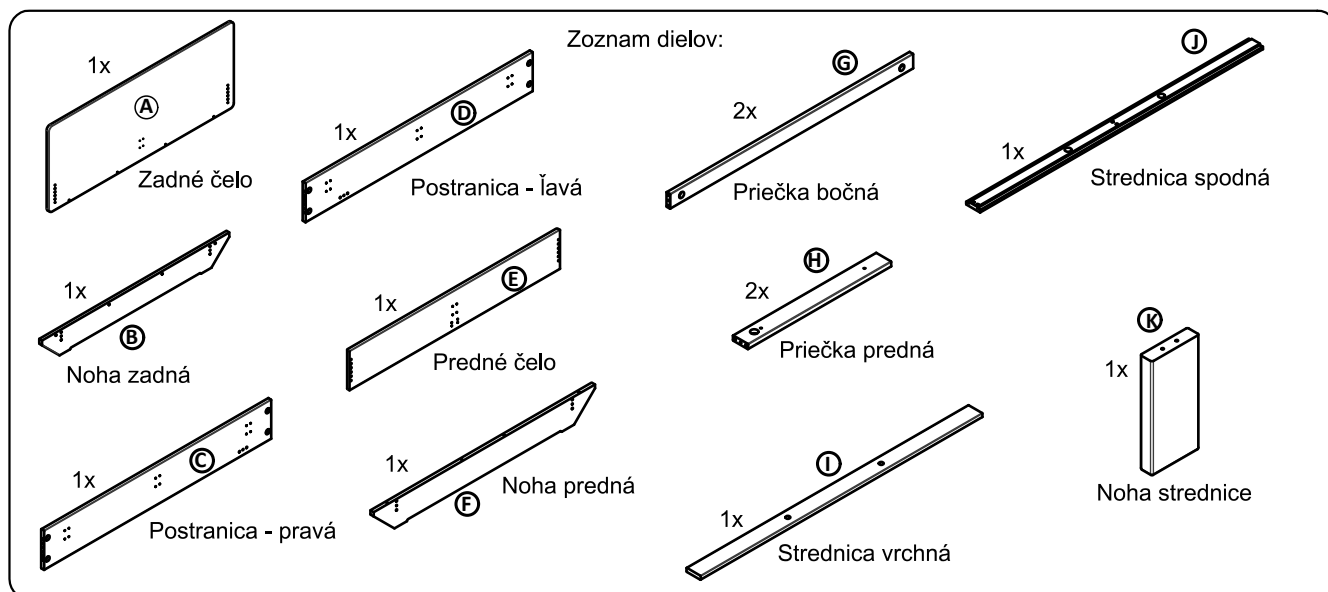

Detail 1:

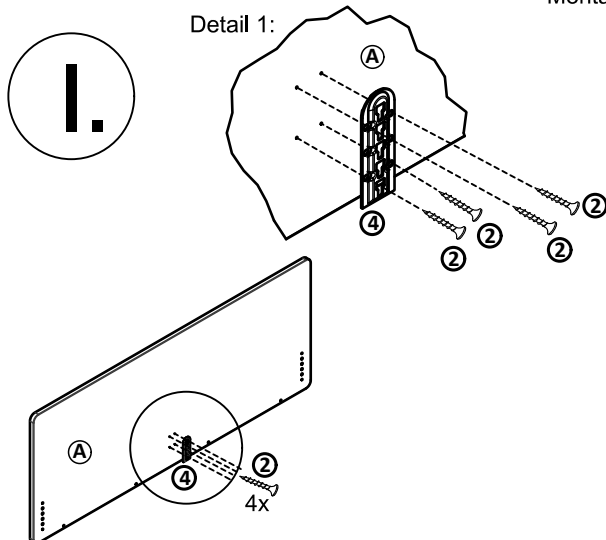


Montáž korpusu postele:

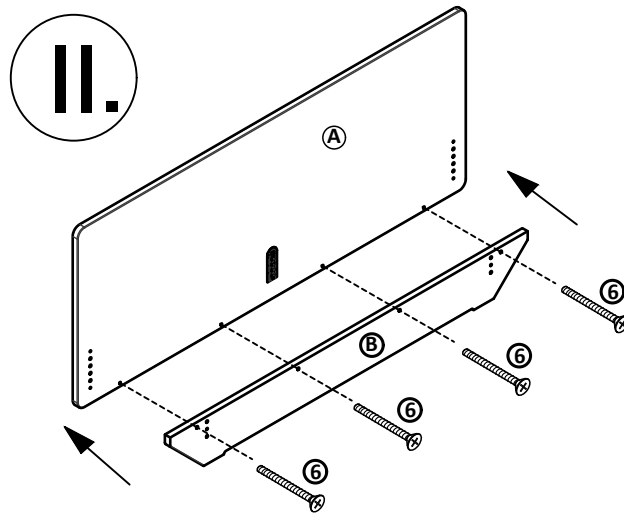


III.

Detail 3:

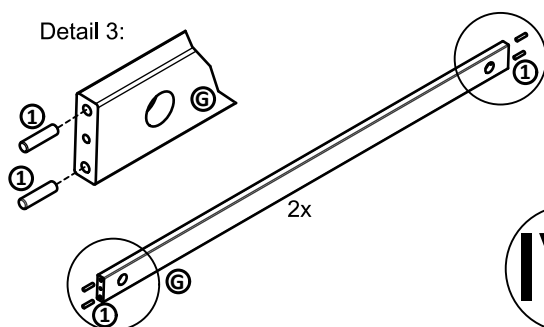


Detail 4:

IV.

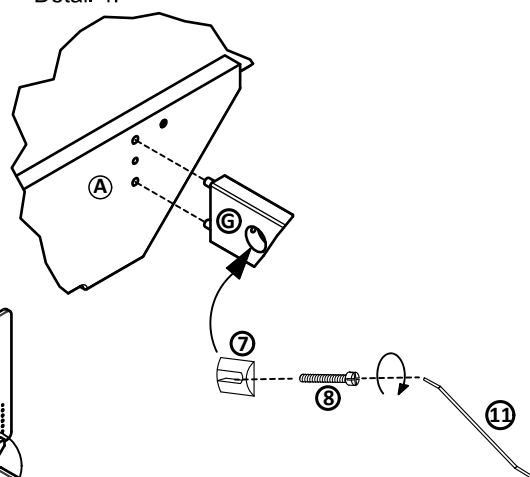


V.

Detail 5:

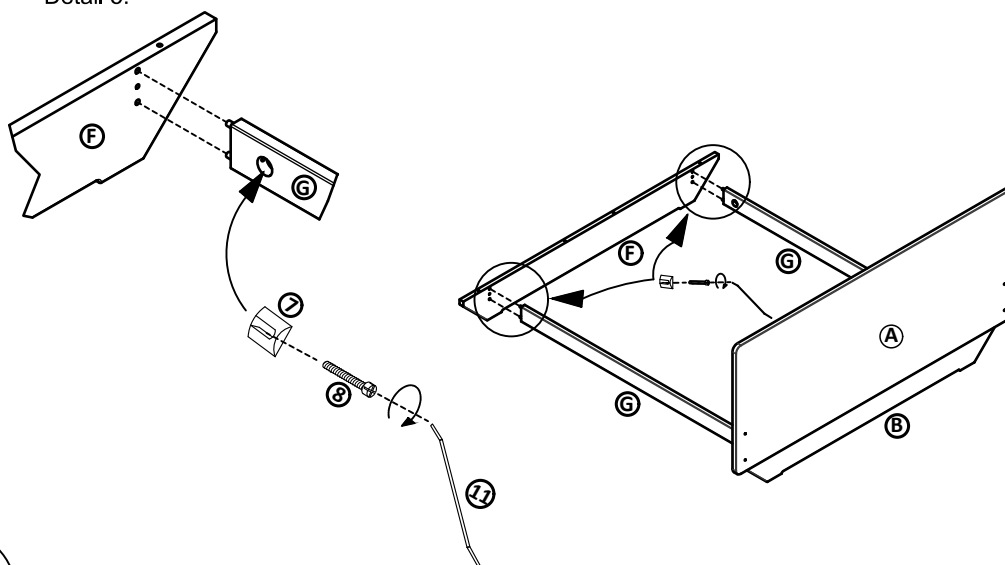


VI.


Detail 6a, 6b:

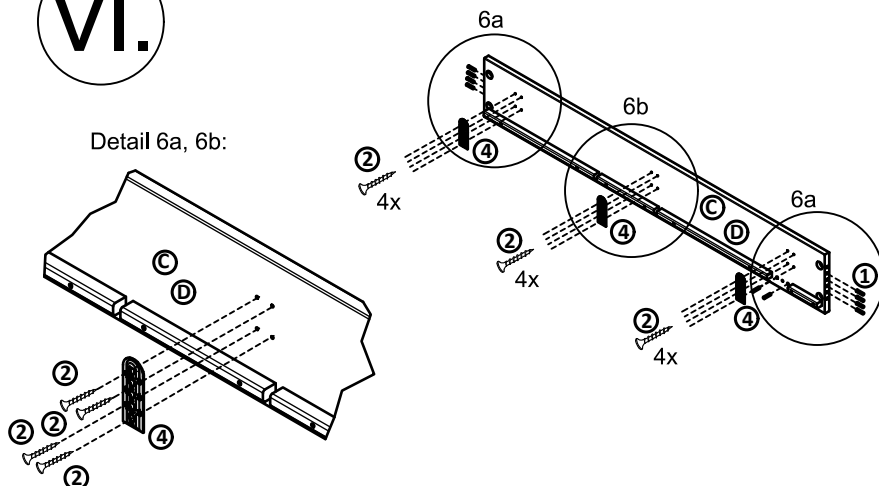

Detail 6a:

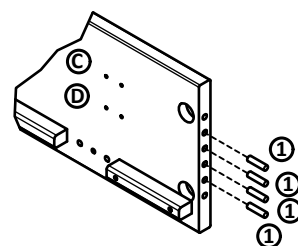


VII.

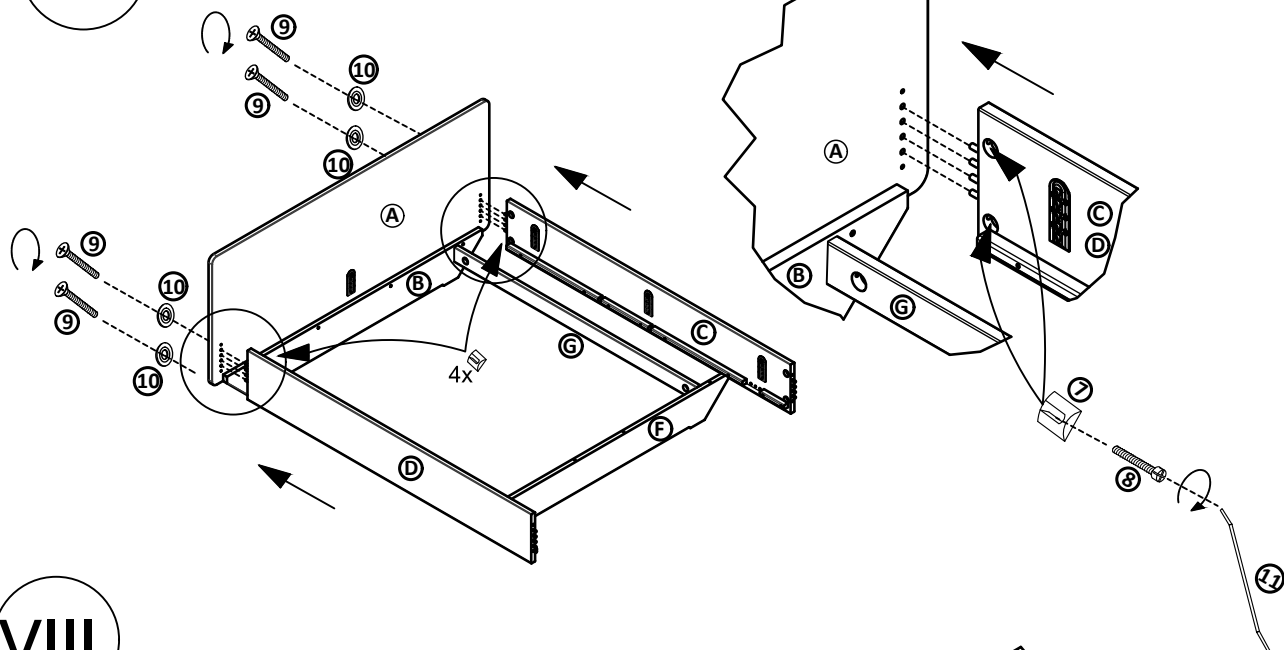


VIII.


Detail 8-1:

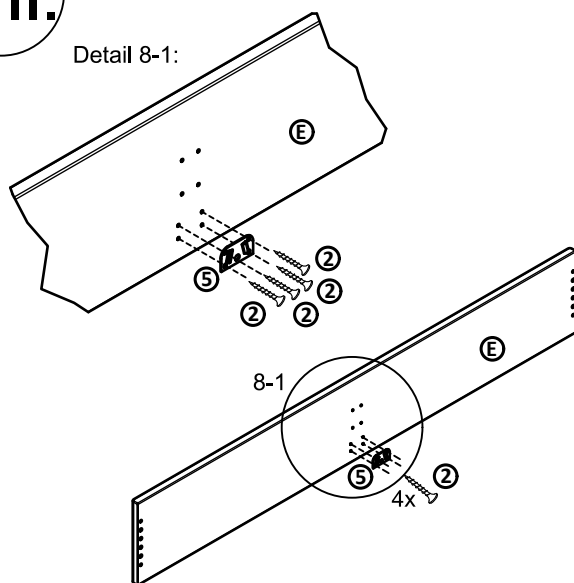


Detail 8-2:

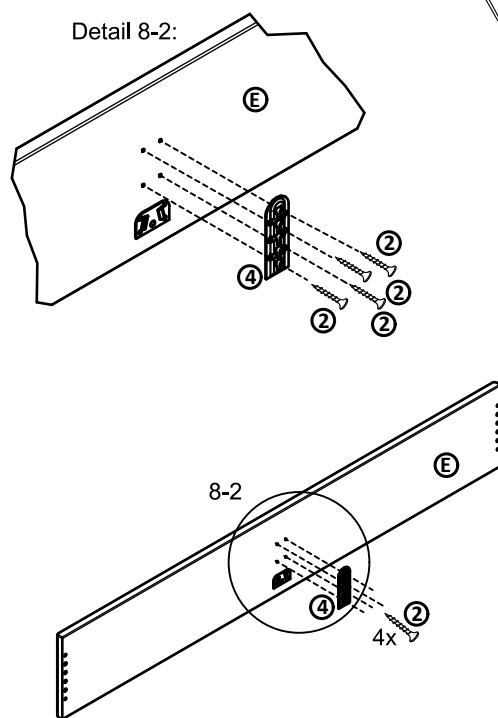

IX.


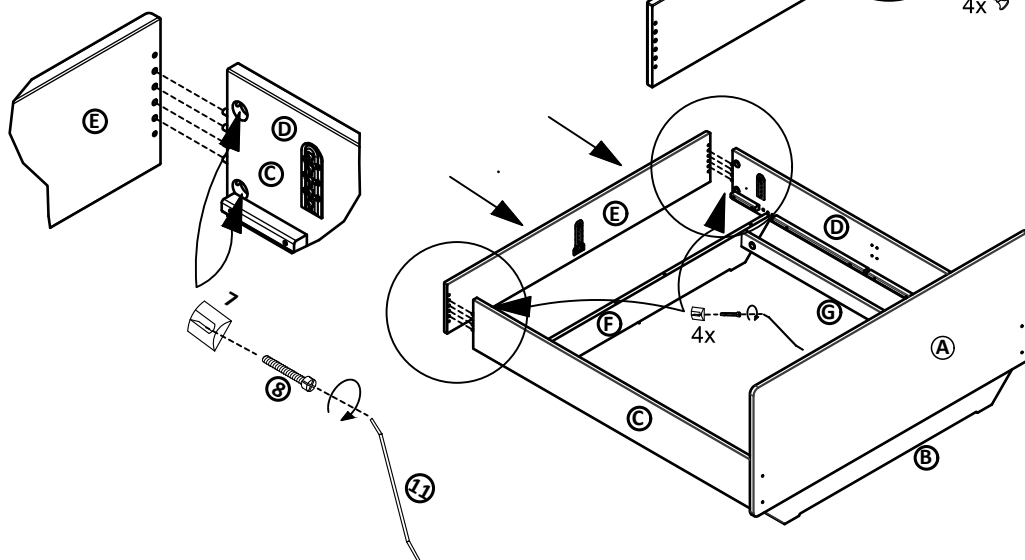


X.

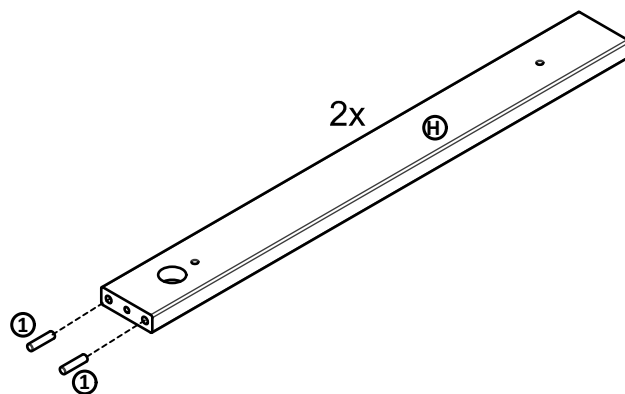


XI.

Detail 11:


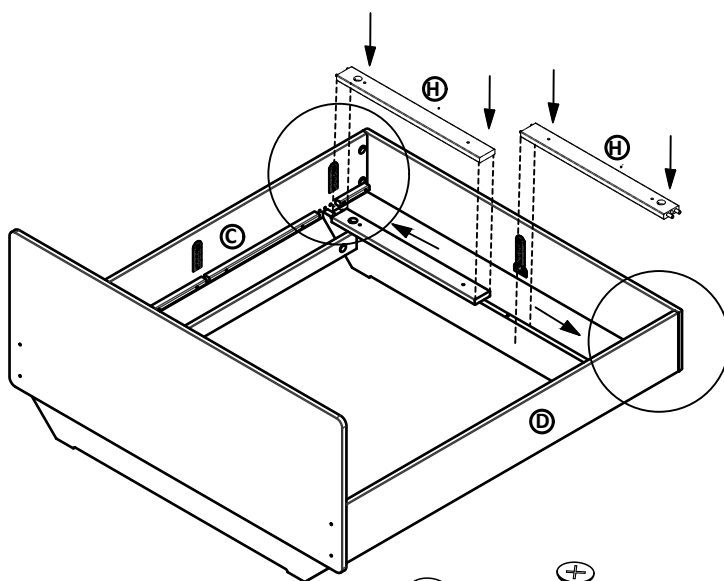
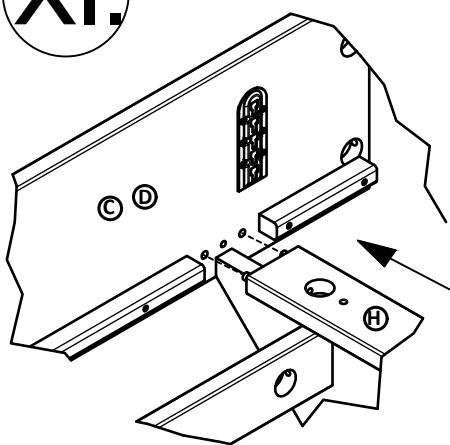


XII.


Detail 12a,c:

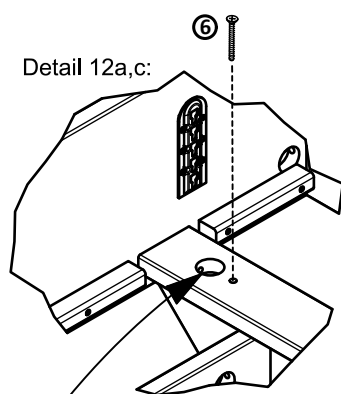


Detail 12b:

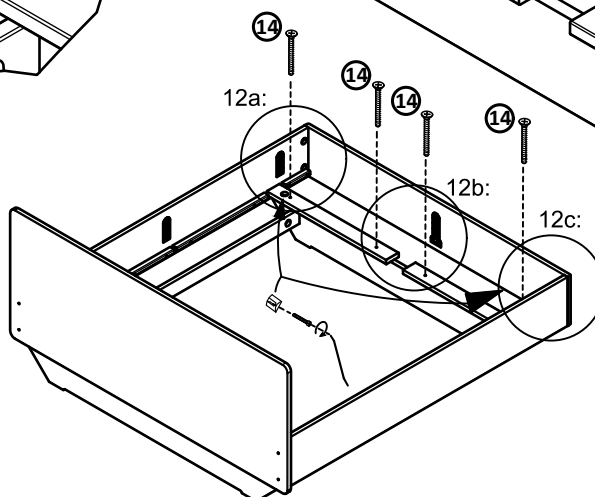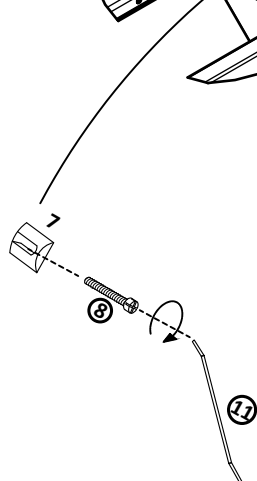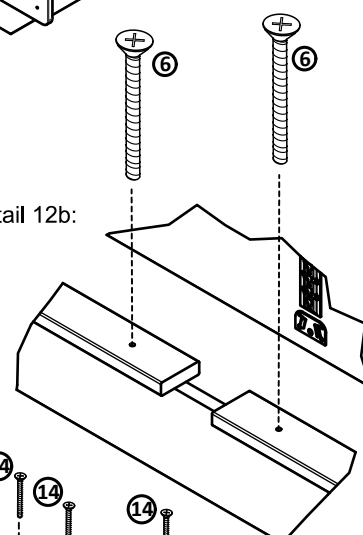


XIII.

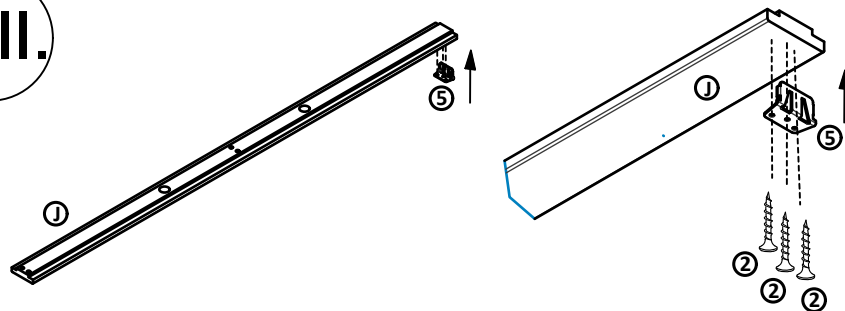


XIV.

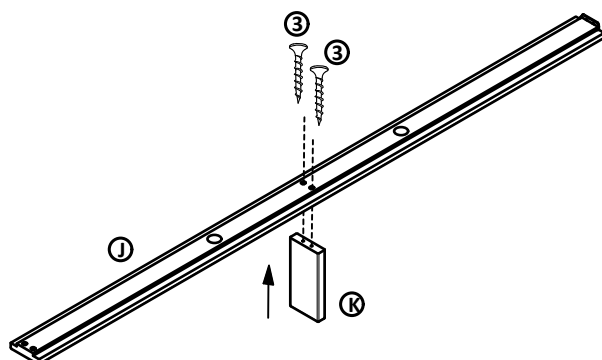


XV.

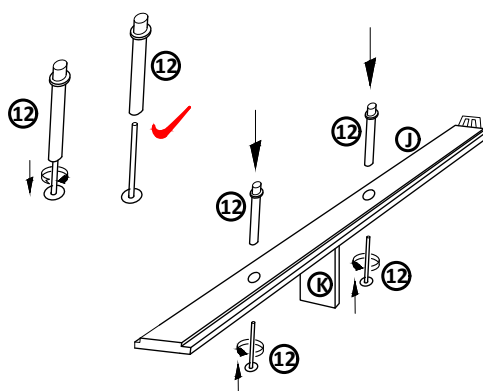


XVI.

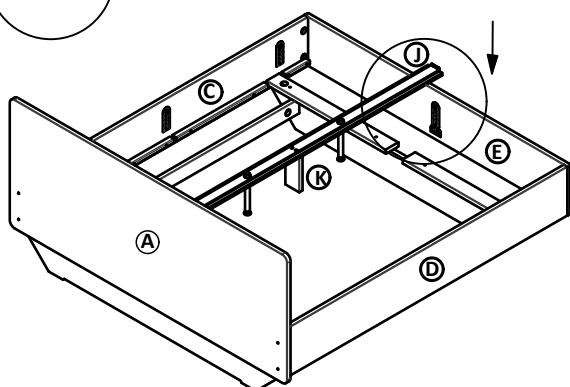


Detail 16:

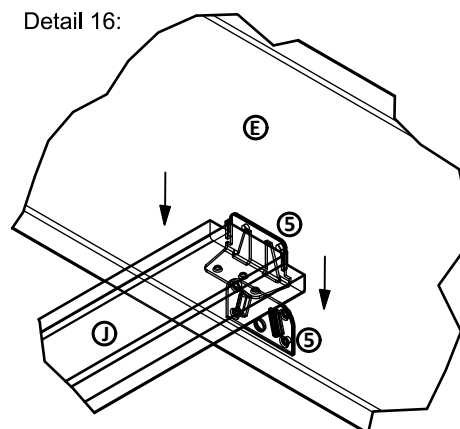

XVII.

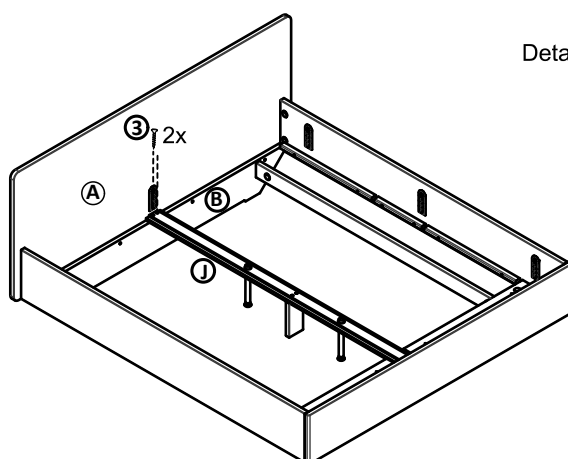


Detail 17:

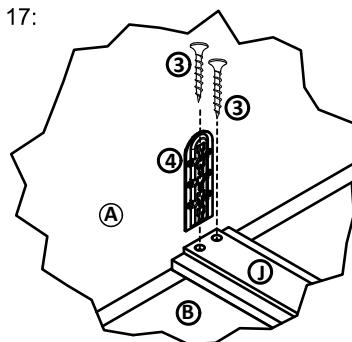


XVIII.


Vloženie úložného priestoru : (v prípade, že úložný priestor nie je objednaný, pokračuje sa krokom XIX.)

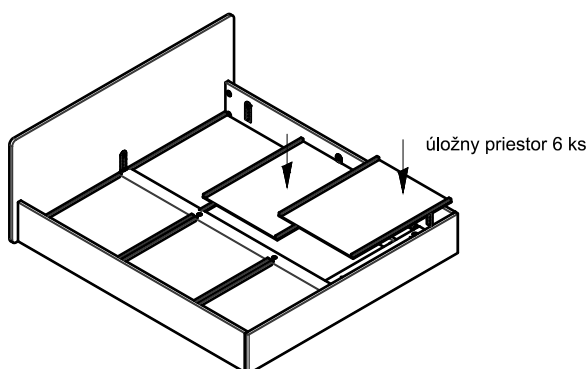

XIX.


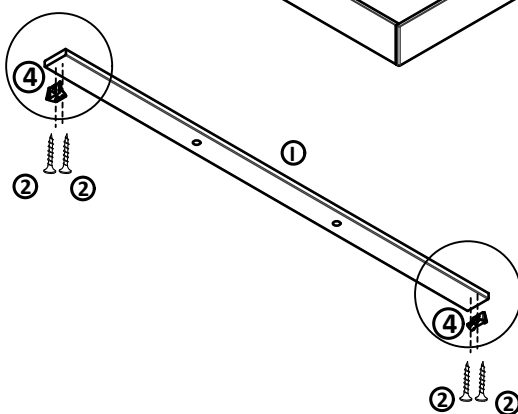


Detail 19:

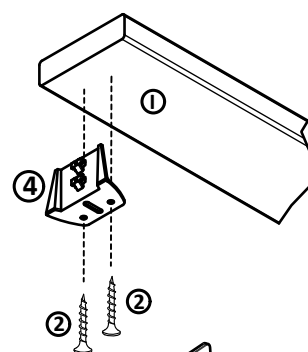

XX.


Detail 20:

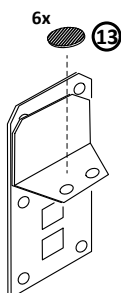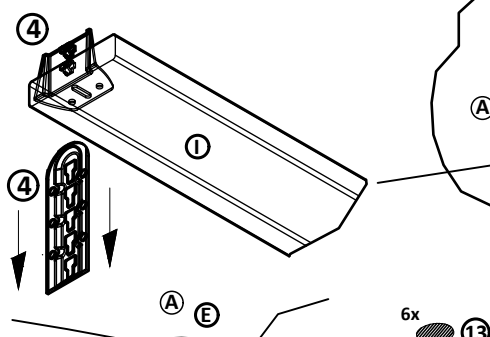

XXI.

Typy postelí Kalimera:

a) s úložným priestorom

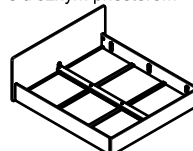

b) bez úložného priestoru

